

10" REMOTE

TECH-SHEET

COALESCER ELEMENT SET REPLACEMENT INSTRUCTIONS

WALKER AIRSEP CCE® SYSTEM 10" REMOTE UNIT DIESEL ENGINE (ALL APPLICATIONS)

SERVICE RECOMMENDATIONS

NOTE: Each Engine is different depending on manufacturer, wear, and hours accumulated, as well as in-service duty cycle. Current replacement interval for 10" XL CCE Coalescing element is 500 -1000 Hours. You may exceed this interval providing engine crankcase pressures are within engine manufacturer's recommendation. In no event should the element be in service longer than 1200 hours.

Note: You may want to use rags or shop towels to prevent dripping oil during the procedure.

- 1) Shutdown engine before servicing.
- 2) Un-clip fasteners at top of lid and disconnect any hose clamps attaching hoses to lid.
- Remove lid and inspect underside of lid. You will find one (1) or
 (2) 1st Stage filter paks [A], (Blue Discs), remove and discard filter pak(s).
- 4) Install new filterpak(s) [A] as furnished in the element set.
- 5) Locate the "baffle opening" on the primary element [B] and be sure the open window is positioned at the BOTTOM of the element. Replace the main coalescing element [B] and verify that open window is near bottom of AIRSEP before closing. (See Illustration - shown on page 2)
- 6) Align lid and seat top with housing.
- 7) Re-install fasteners, and re-attach hoses.
- 8) Start engine and check for leaks. Record engine hours and initial crankcase pressures.
- * Note: Used filter paks should be discarded properly and in accordance with any state, local, or federal disposal guidelines.

REPLACE FILTER SET WITH (40-2013) or (40-2016 - Double 1st Stage Unit)

© 2012 Walker Engineering Enterprises, Inc.

www.walkerairsep.com

-continued (See Attached Diagram)

